


MEASURE & INSTALL

SPACING REQUIREMENTS RESOURCE

THINGS TO KNOW

DRAPERY


Every treatment requires 3" of space to properly traverse.

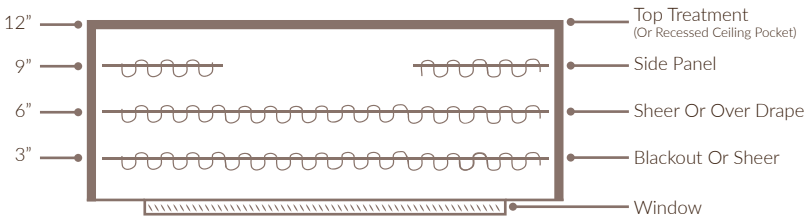

ROLLER SHADE AND DRAPERY


The space needed for roller shades is dependent upon the depth of the bracket.

OUTSIDE MOUNT

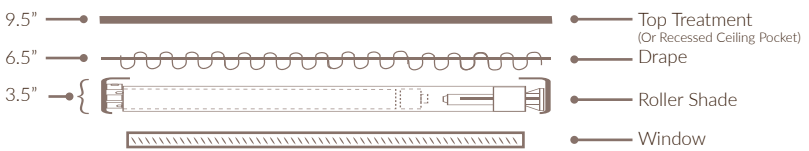

*When using outside mount roller shades, check Roller Shade Cut Sheet for bracket depth specifications.

INSIDE MOUNT



*When using inside mount roller shades, confirm depth of window sill equals or is greater than Roller Shade Bracket depth.



QUILTCRAFT